

Сцепные муты, измерительные круги, монтажные фланки

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04



Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59


Киргизия +996(312)96-26-47

эл.почта: hea@nt-rt.ru || сайт: <https://hohner.nt-rt.ru/>

Torque supports

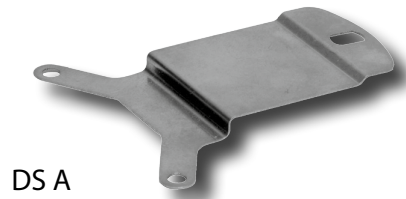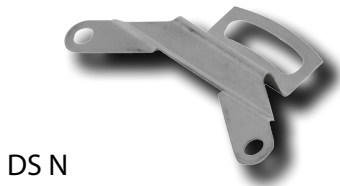

Mechanical dimensions

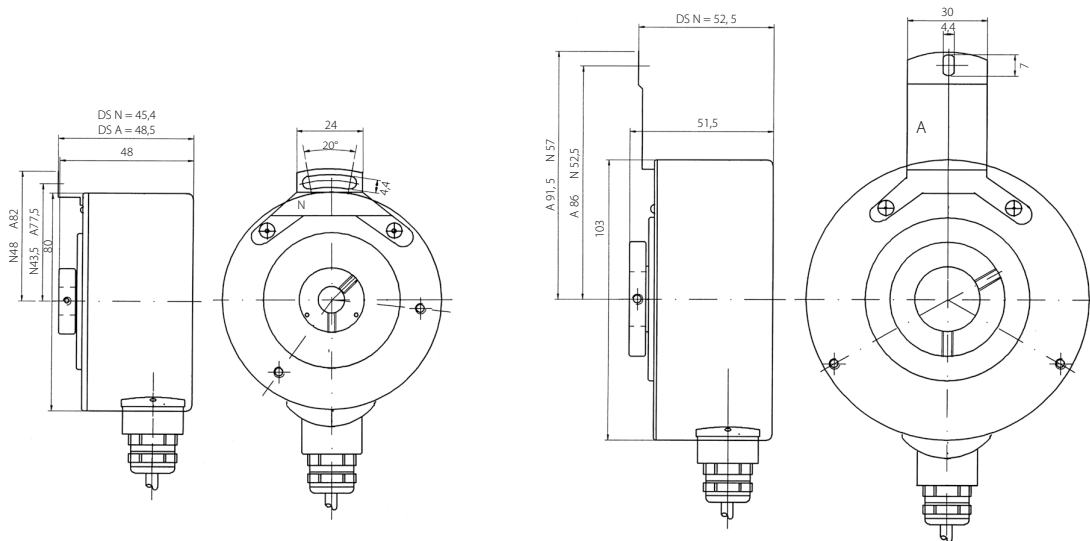

Installation instructions

In order to compensate axial and radial shaft run-out, as well as any angle set, the rotary encoder flange may not be rigidly secured. Fix the flange above a stator coupling (e.g. spring sheet) as torque support.



The following flexible fixing plates are available:

DS A suitable for encoder type HWI 103

Shaft offset max: +/- 2.0 mm axial, +/- 0.15 mm radial


DS N suitable for encoder type HWI 80

Shaft offset max: +/- 0.5 mm axial, +/- 0.3 mm radial


Measuring wheels	Type	Circumference	Material	D	B	Coating	Profile
	M 101	500	Plastic or Aluminium	10 / 12	25	Smooth plastic	
	M 102	500	Plastic or Aluminium	10 / 12	25	Ribbed plastic	
	M 120	500	Plastic or Aluminium	10 / 12	25	Napped rubber	
	M 130	500	Plastic or Aluminium	10 / 12	25	Knurled aluminium	
	M 140	500	Plastic or Aluminium	10 / 12	25	Vulkollan plastic	
	M 108	200	Plastic or Aluminium	6/10	12	Smooth plastic	
	M 110	200	Plastic or Aluminium	6/10	12	Knurled aluminium	
	M 190	200	Plastic or Aluminium	6/10	12	Napped rubber	
	M 109	200	Plastic or Aluminium	6/10	12	Ribbed plastic	

Mechanical dimensions


Measuring wheel 500 mm circumference

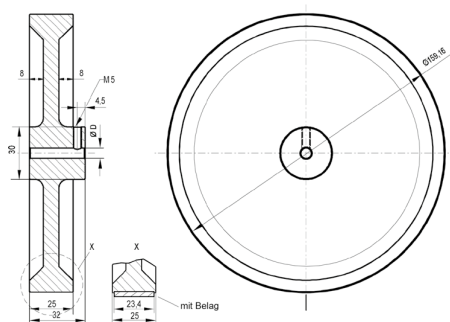

Measuring wheel 200 mm circumference

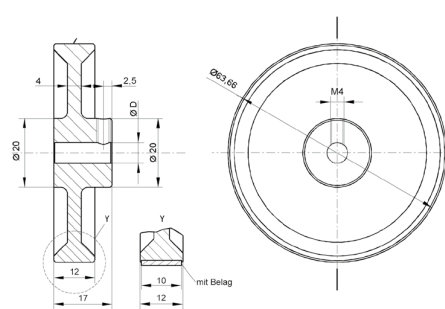

Tolerance
0.2 % – 0.5 %




Rack	Type	Width	Height	Length
	Z 214	5	20	1000
Sprocket	Type	Teeth	Circumference	

Sprocket	Type	Teeth	Circumference
	R 218	16	50,26


Round flange

F 2 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

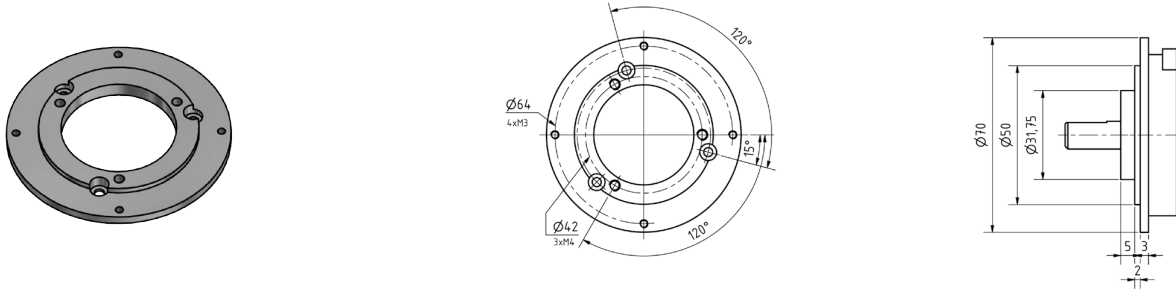


Round flange

F 3 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

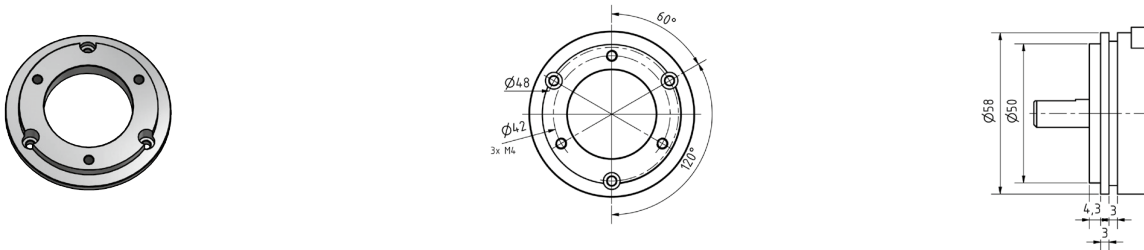


Round flange

F 4 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

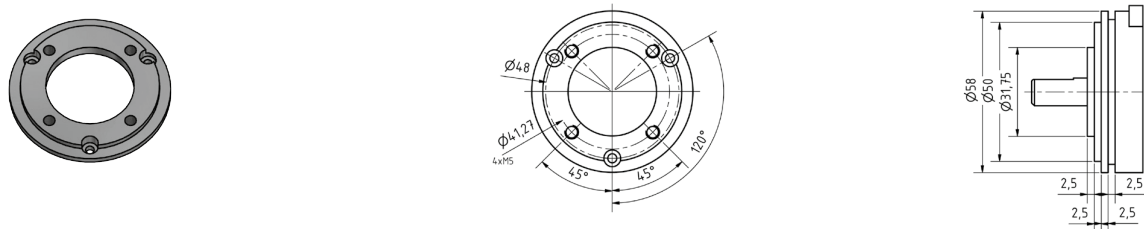




Round flange

Euro flange for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM, AWI 90, AWA 90, PA 02, PH 05, 70-140 and 72

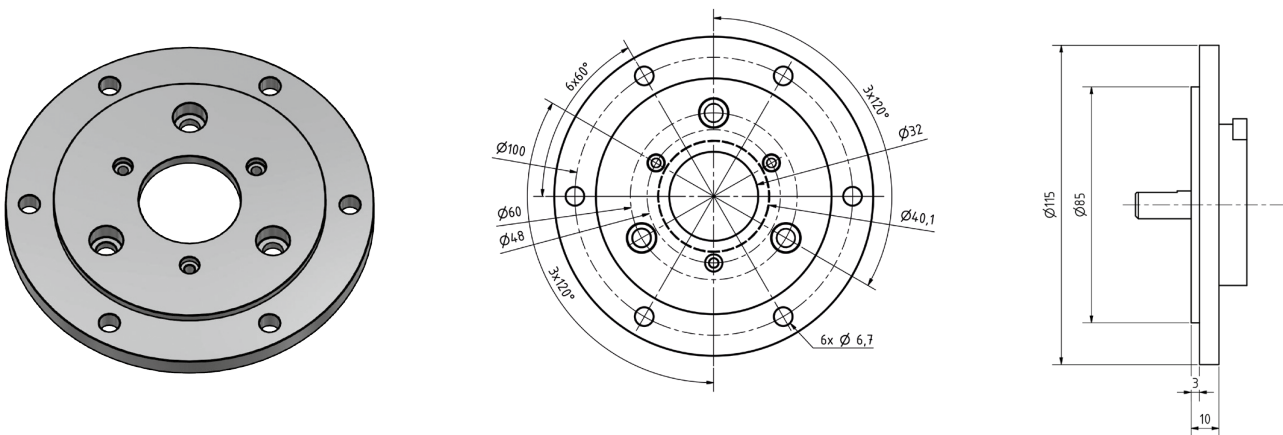




Square flange

F 5 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

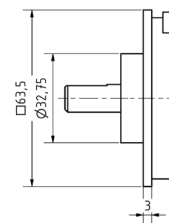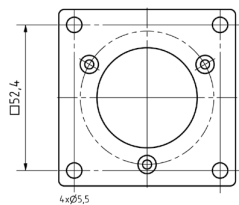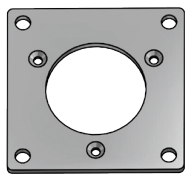




Square flange

F 6 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

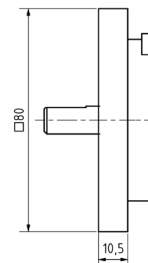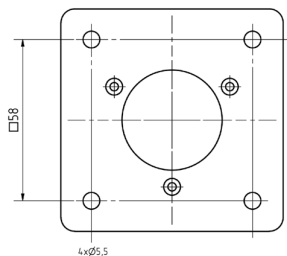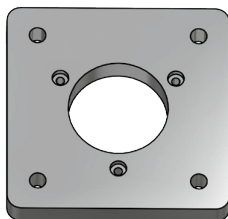




Square flange

F 7 S for series AWI 40 S

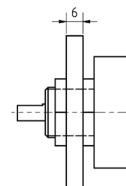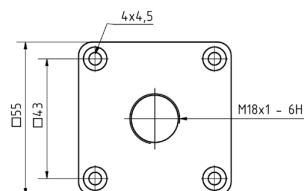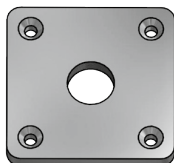




Square flange

F 7 E for series AWI 40 E

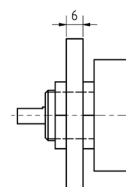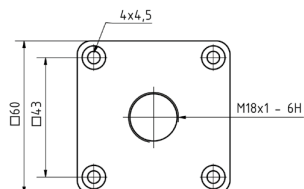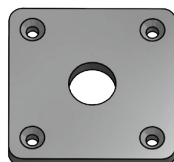




Angle flange

WF 1 for series AWI 90, AWA 90, PH 05, PA 02, 72, 70-140

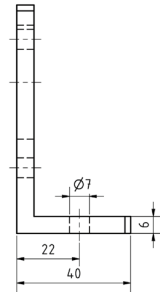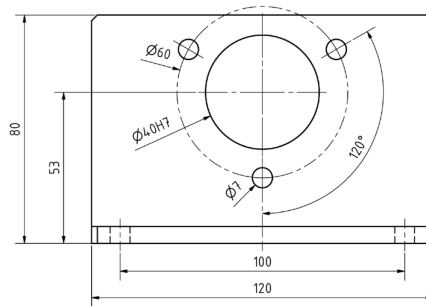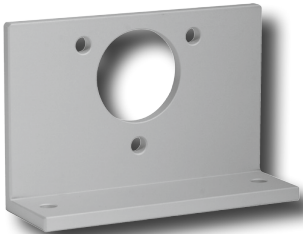




Angle flange

WF 2 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

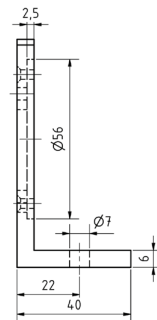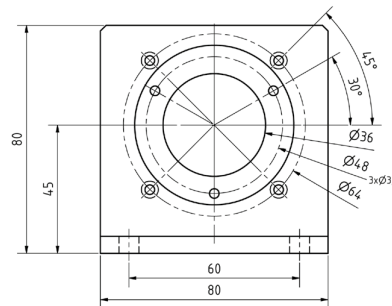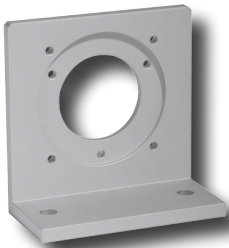

Angle flange

WF 3 for series AWI 58, AWI 58H, AWA 58, BC 58, PS and PSM

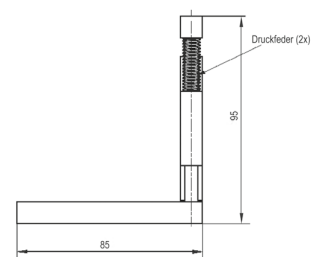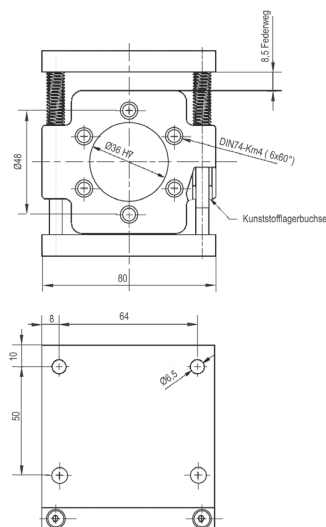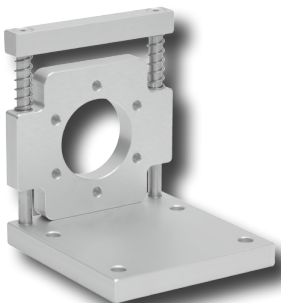



Mounting bell

For series AWA 58, AWI 58, AWI 58 H, BC 58, PS & PSM

The mounting bell MOGL 5038 provides a very simple and inexpensive installation for all encoders with a synchro flange. The mounting bell made of fibreglass-reinforced plastic in injection moulding technology has a thermally and electrically insulating effect.

The encoder is mounted optionally onto the bell with 3 screws M4 x 10 DIN 912 or 3 mounting eccentrics

Technical data


Model

Material
Temperature range
Weight
Net distance (encoder drive)
Net outlet (for coupling)

MOGL 5038

Fortron (PPS) 40% fibreglass-reinforced, black
-40° C ... +270° C
54 g
25.8 mm
Ø 32.1 mm

Mechanical dimensions

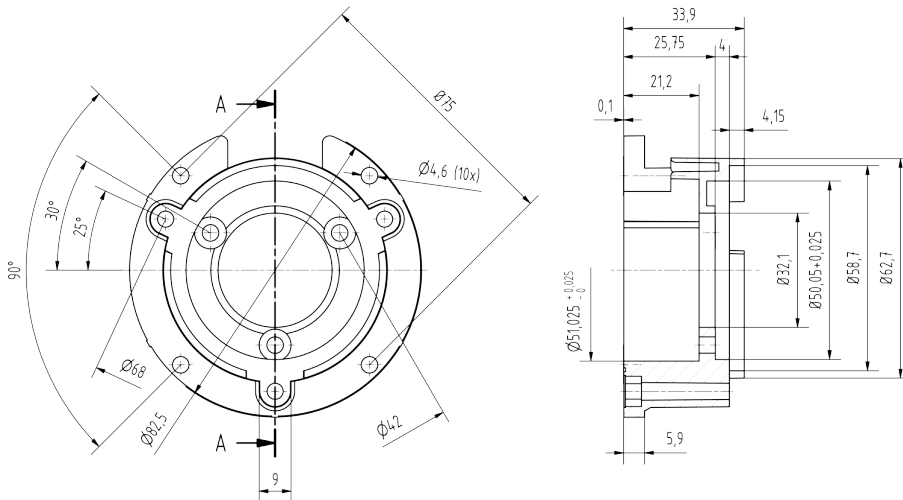

Mounting kit DMSA 2000 for mounting bell

consisting of:

- 4 x screw M4 x 12 DIN 912
- 3 x mounting eccentric BEMN 1242 49
- 3 x screw M4 x 10 DIN 912
- 3 x cylinder screw M4 x 35 DIN 84 A2
- 7 x disc 4.3 DIN 433
- 3 x hexagon nut M4 DIN 934 A2

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hea@nt-rt.ru || сайт: <https://hohner.nt-rt.ru/>