

Абсолютные энкодеры 72

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884


Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hea@nt-rt.ru || сайт: <https://hohner.nt-rt.ru/>

All specification in millimeters

Output circuits

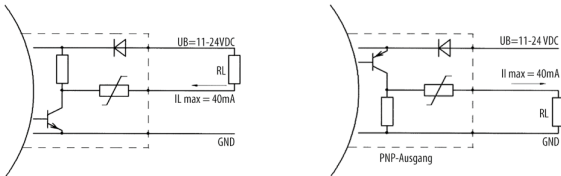


Order ref.: NPN


PNP

Output signals

Binär-Code

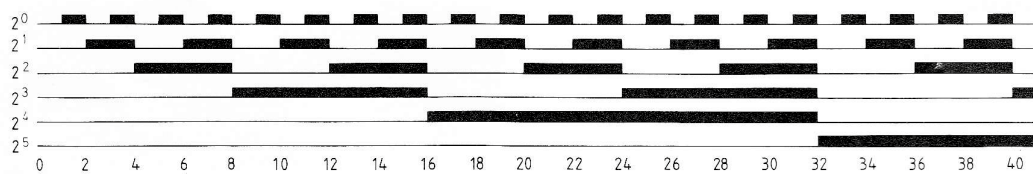

BCD-Code

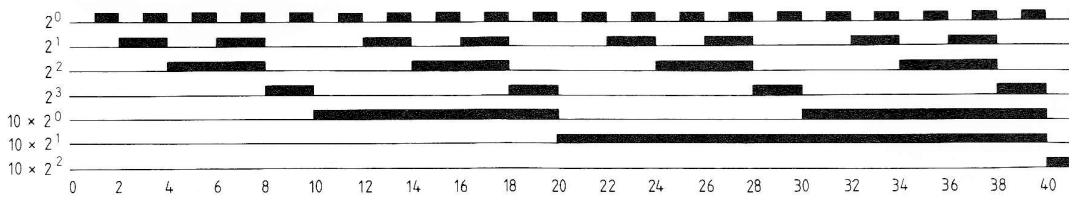

Order reference

Series 72 1 4 0 U — Division up to max. 3.600 (as of 2, each division available by 2)

Mech. Design
140 = Standard

Coding + Count direction
U* = Bin ↔ 18-bit = 262 144
or
BCD ↔ 18-bit = 39 999

* reversible

Output circuit
N = NPN (current sink)
P = PNP (current source)

Modification
B = without buffer
C = Standard
D = Reset pulse
K = Cable output
Z = ext. buffer

Special versions (on request)


- External buffering
- Without buffering
- Cable output
- Flange-triggered reset pulse

Functional description of the control inputs

Pin	Desc.	Explanation
25 *	Reset Acknowledgement Alarm	A signal (+ Ub) resets the internal counter. The alarm output is acknowledged at the same time.
24 *	Code Selection of output code	A signal (+ Ub) switches the code type from binary to BCD code
23 *	Change of counting direction	A signal (+ Ub) changes the counting direction. Looking at the shaft: Sequence of numbers increasing for an anticlockwise shaft)
22	Alarm/Relay output Unilateral mass of switching	When the internal battery no longer has sufficient voltage and counting errors could arise, this is indicated by resetting the output. Furthermore, the internal power supply is monitored during operation.

* All control inputs are switched via octocoupler

Functional description of alarm output: (after applying the operating voltage)

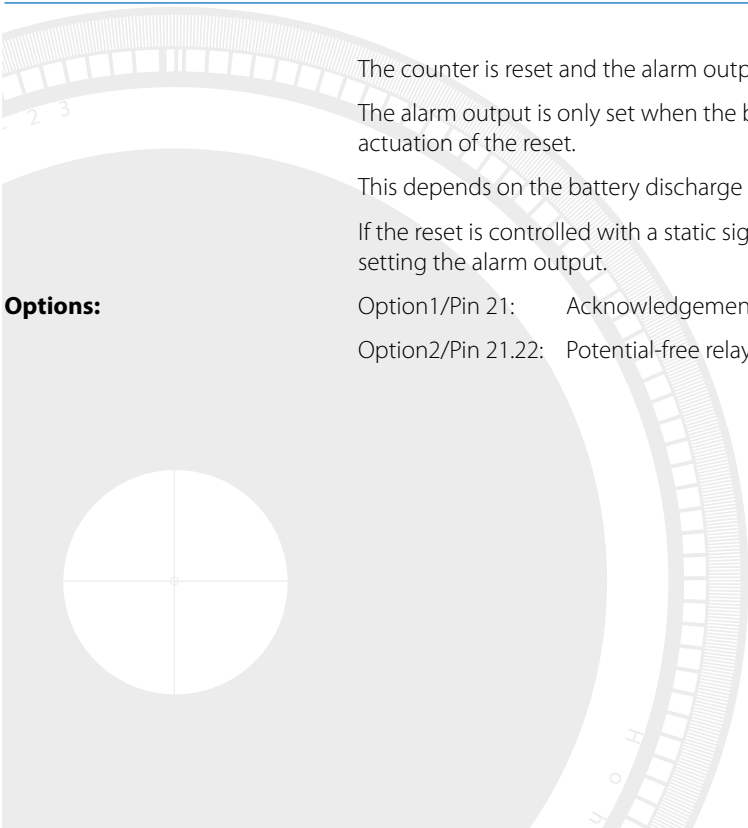

The counter is reset and the alarm output is acknowledged by resetting.

The alarm output is only set when the battery voltage has exceeded a certain value during actuation of the reset.

This depends on the battery discharge and can take a few minutes.

If the reset is controlled with a static signal of + Ub, the release of the count is signalled by setting the alarm output.

Options:

Option1/Pin 21: Acknowledgement input for alarm signal independent of reset

Option2/Pin 21.22: Potential-free relay contact for alarm signal

Pin	25-pole connector		Wire colour at cable output (DIN 47 100)
	Valence for binary code	Valence for BCD code	
1	–	–	white
2	+	+	brown
3	2^0	1	green
4	2^1	2	yellow
5	2^2	4	gray
6	2^3	8	pink
7	2^4	1	blue
8	2^5	2	red
9	2^6	4	black
10	2^7	8	purple
11	2^8	1	gray-pink
12	2^9	2	blue-red
13	2^{10}	4	white-green
14	2^{11}	8	brown-green
15	2^{12}	1	white-yellow
16	2^{13}	2	yellow-brown
17	2^{14}	4	white-gray
18	2^{15}	8	gray-brown
19	2^{16}	1	white-pink
20	2^{17}	2	pink-brown
21	Option	Option	white-blue
22	Alarm	Alarm	brown-blue
23	↔	↔	white-red
24	Binary / BCD	Binary / BCD	brown-red
25	Reset	Reset	white-black

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hea@nt-rt.ru || сайт: <https://hohner.nt-rt.ru/>