

# Взрывозащищенные энкодеры NAMFRX

## Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04  
Ангарск (3955)60-70-56  
Архангельск (8182)63-90-72  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Благовещенск (4162)22-76-07  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Владикавказ (8672)28-90-48  
Владимир (4922)49-43-18  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Коломна (4966)23-41-49  
Кострома (4942)77-07-48  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Курган (3522)50-90-47  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Ноябрьск (3496)41-32-12  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Петрозаводск (8142)55-98-37  
Псков (8112)59-10-37  
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Саранск (8342)22-96-24  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Сыктывкар (8212)25-95-17  
Тамбов (4752)50-40-97  
Тверь (4822)63-31-35

Тольятти (8482)63-91-07  
Томск (3822)98-41-53  
Тула (4872)33-79-87  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Улан-Удэ (3012)59-97-51  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Чебоксары (8352)28-53-07  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Чита (3022)38-34-83  
Якутск (4112)23-90-97  
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04


Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: [hea@nt-rt.ru](mailto:hea@nt-rt.ru) || сайт: <https://hohner.nt-rt.ru/>

## Series NAMFPX incremental encoder for drawworks

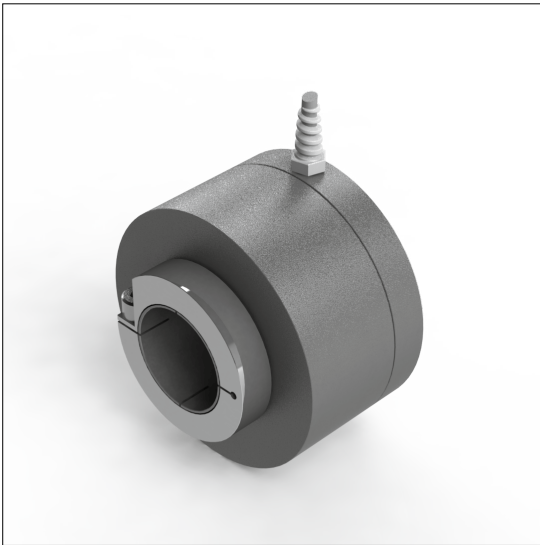

N A M F P X   X X L   8 G R / X X X X

|                   |  |                   |                         |
|-------------------|--|-------------------|-------------------------|
| <u>Shaft Size</u> |  | <u>Output</u>     | <u>Resolution - ppr</u> |
| 14 = 14 mm        |  | 8 = ABO and Comps |                         |
| 16 = 16 mm        |  |                   |                         |
| 20 = 20 mm        |  |                   |                         |
| 25 = 25 mm        |  |                   |                         |
| 30 = 30 mm        |  |                   |                         |
| AA = 1"           |  |                   |                         |

Electronic Output  
L = 5...24V Extended  
Line Driver



IECEX



Zone 0, Class 1 Div 1

### Technical Data

|                 |                                                  |
|-----------------|--------------------------------------------------|
| Operating temp: | - 20 ...+ 60 degrees C<br>- 4 ...+ 140 degrees F |
| Max frequency:  | 150 kHz                                          |
| Weight:         | 53 oz (1.5 kg)                                   |
| Protection:     | IP 66M, NEMA 4                                   |
| Housing:        | Aluminum                                         |
| Shaft:          | Stainless Steel                                  |
| Bearings:       | 2 x 6807 ZZ                                      |
| Torque:         | 0.8 oz/in (6 N-cm)                               |
| Shaft load:     | Supports its own weight                          |
| Humidity:       | Up to 98% permissible                            |
| Speed:          | 3000 RPM                                         |
| Max. ppr        | 5000                                             |
| Shock:          | 10g (6 msec)                                     |
| Vibration:      | 5g (500 Hz)                                      |

### Connection Options

|              |                       |
|--------------|-----------------------|
| PS GND       | <b>Cable 2 meters</b> |
| PS 5...24 V  | Black                 |
| Output A     | Red                   |
| Output B     | White                 |
| Output O     | Blue                  |
| Output A inv | Yellow                |
| Output B inv | Green                 |
| Output O inv | Violet                |
|              | Brown                 |

### Connector

Any type of connector with more than 4 pins and an IP rating of 66 can be used, pin allocations will be determined by end customer. More than one connector is possible as well.

### Output for Channels

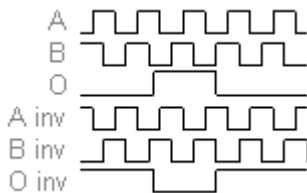


Diagram is shown clockwise

## Certifications

To use the encoder in a hazardous area, a safety barrier or galvanic isolator has to be used. Our six channel barrier and isolator work with our encoders.

IP 66M

ATEX


IECEX

CSA


GOST-CU

## Mounting Instructions

Slide encoder onto shaft. To keep encoder from rotating: have a pin to prevent rotation in one of the mounting holes, or a bracket bolted onto the mounting holes, or simply tie wrap the cable. Whatever is done, ensure there is a bit of play between encoder and mounting arrangement to prevent bearing damage. Hook up the encoder with the connections as described. Make sure power supply meets specifications.

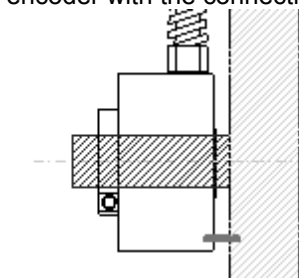

## Dimensions

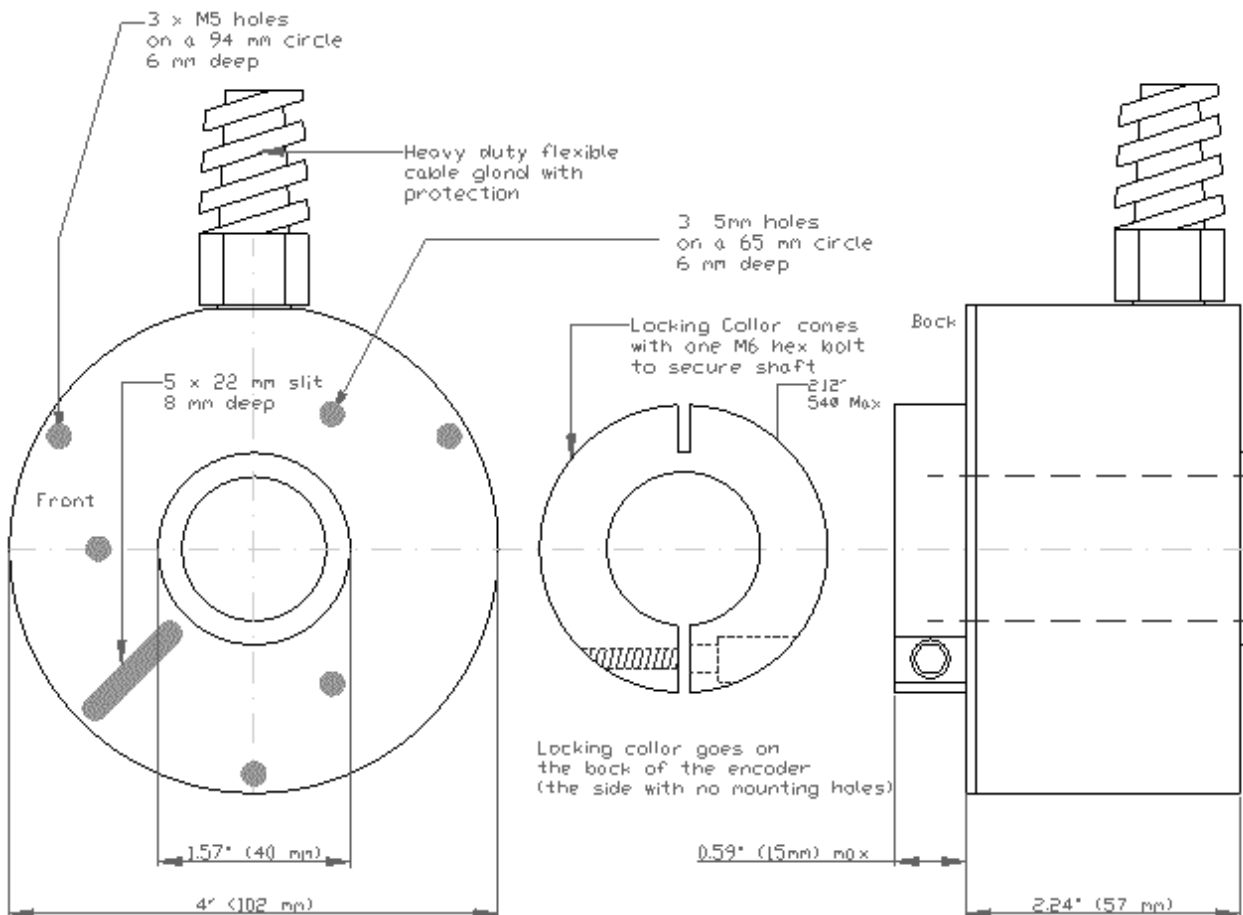

## По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04  
Ангарск (3955)60-70-56  
Архангельск (8182)63-90-72  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Благовещенск (4162)22-76-07  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Владикавказ (8672)28-90-48  
Владимир (4922)49-43-18  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Коломна (4966)23-41-49  
Кострома (4942)77-07-48  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Курган (3522)50-90-47  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Ноябрьск (3496)41-32-12  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Петрозаводск (8142)55-98-37  
Псков (8112)59-10-37  
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Саранск (8342)22-96-24  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Сыктывкар (8212)25-95-17  
Тамбов (4752)50-40-97  
Тверь (4822)63-31-35

Тольятти (8482)63-91-07  
Томск (3822)98-41-53  
Тула (4872)33-79-87  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Улан-Удэ (3012)59-97-51  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Чебоксары (8352)28-53-07  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Чита (3022)38-34-83  
Якутск (4112)23-90-97  
Ярославль (4852)69-52-93

**Россия** +7(495)268-04-70

**Казахстан** +(727)345-47-04

**Беларусь** +(375)257-127-884

**Узбекистан** +998(71)205-18-59

**Киргизия** +996(312)96-26-47

эл.почта: [hea@nt-rt.ru](mailto:hea@nt-rt.ru) || сайт: <https://hohner.nt-rt.ru/>